




Automatic Air Quality Sensing Wall Control

Product #: 414729

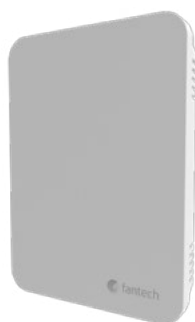

Technologically advanced and feature-rich; the ECO-Feel™ provides contractors and homeowners with a higher level of confidence over indoor air quality. The ECO-Feel is preprogrammed to run continuously on ECO Mode.

ECO Mode

The unique ECO Mode will automatically choose the best operating settings based on your home's current conditions, in order to find the right balance between good air quality and lower energy consumption. The ECO-Feel uses a dedicated Indoor Air Quality (IAQ) sensor to make sure there is extra ventilation when you need it the most, such as during cooking, cleaning and large family gatherings.

Features

- Preprogramme to run on ECO Mode continuously
- Dedicated Indoor Air Quality (IAQ) Sensor and Indoor Relative Humidity (RH) sensor.
- Targets maintaining a 45% indoor relative humidity via ventilation, when possible.
- Error code LED reduce troubleshooting time
- Absolutely no user input or configuration required to operate effectively
- Peace of mind that your home ventilation control needs are met automatically with the smart ECO Mode algorithm

External dimensions

The wall control has a dimension of $3\frac{19}{64}$ " wide x $4\frac{19}{32}$ " high x $\frac{53}{64}$ " thick (84 mm x 117 mm x 21 mm).

Communication

RS-485 Modbus

Power

12Vdc

Connector

4 wire screw terminal up to 18 AWG

Plastics

Smooth matte surface finish

Backplate

Can be mounted using screws on drywall and/or on electrical enclosure NEMA 5-15R (Residential 120Vac single enclosure). For optimal wireless range when using in conjunction with RTS-W wireless timer, it is recommended to use a plastic enclosure instead of metal.


Ventilation Mode

The ECO-Feel wall control always runs at a minimum speed of 20 mins ON/40 mins OFF per hour. Ventilate rate can be increased based on the ECO Mode smart ventilation

Warranty

2 year warranty

Dimensions

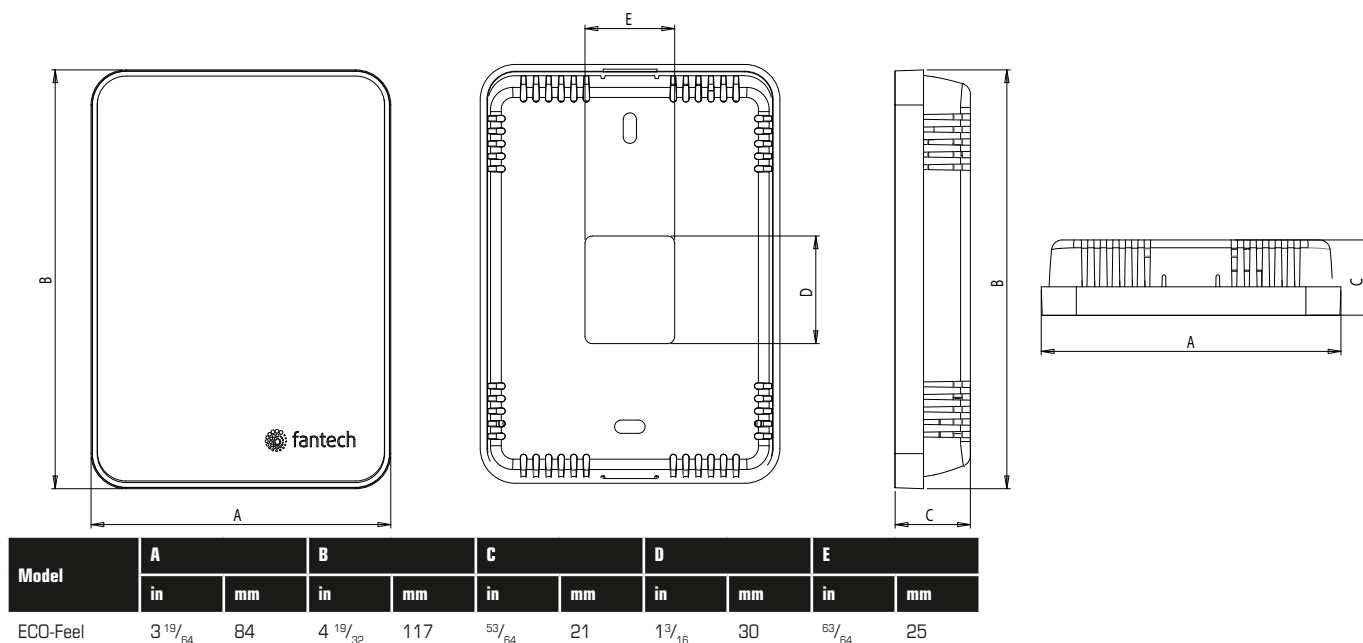


LED Codes

Status LED Troubleshooting Codes (On back of device):

Solid **ON** LED - Device is operating correctly

Blinking LED - communication error, verify A and B signal wires are correct.

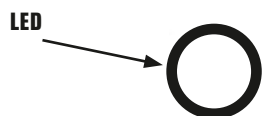

Requirements and standards

- Complies with Novoclimat 2.0

Contacts

Submitted by:		Date:
Quantity:	Model:	Project #:
Comments:		
Location:		
Architect:		
Engineer:		Contractor:

Distributed by:

--

United States 10048 Industrial Blvd. • Lenexa, KS 66215 • 1.800.747.1762 • www.fantech.net

Canada 50 Kanalfakt Way • Bouctouche, NB E4S 3M5 • 1.800.565.3548 • www.fantech.net

Fantech, reserves the right to modify, at any time and without notice, any or all of its products' features, designs, components and specifications to maintain their technological leadership position.